

Features

The Tri-Tech alarm panel conversion kits are designed to upgrade or retro-fit existing panels produced by several major brands. The conversion kit replaces all necessary major components re-utilizing the existing back box eliminating the need for brazing, plumbing and wall reconstruction.



Allied/Chemtron 1-3 gas
Converts with Med Touch T3U4xxxFB



*Example: T3U4OAVFB = Converts pictured Chemtron series 3 Slot Area Alarms. Gas set Oxygen, Medical Air, Medical Vacuum gas modules, Future Expansion (Blank) in 2nd slot, 3rd slot is for Future Expansion (Blank).
See Med Touch Area Alarm Conversion Kits Submittal Data Sheet P/N 99-0508*



Hill-Rom or Medaes 1-3 gas
Converts with Med Touch T3U7xxxFB

Hill-Rom or Medaes 4-6 gas
Converts with Med Touch T3U7xxxxxFF




*Example: T3U7OAVTNFFB = Converts pictured Hill-Rom or Medaes series 3 Slot Area Alarms. Gas set Oxygen, Medical Air, Medical Vacuum, Nitrogen gas modules in 2nd slot, 3nd slot is for Nitrous Oxide Future Expansion (Blank).
See Med Touch Area Alarm Conversion Kits Submittal Data Sheet P/N 99-0508*



Ohio Stacked alarm with base unit up to 2 modules
Converts with Med Touch T2U7xxxF
Up to 3 modules – Med Touch T3U7xxxxB



*Example: T2U7OAVF = Converts pictured Ohio series 2 Slot Area Alarms. Gas set Oxygen, Medical Air, Medical Vacuum, Future Expansion (Blank) in 2nd slot. .
See Med Touch Area Alarm Conversion Kits Submittal Data Sheet P/N 99-0508*

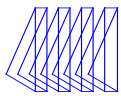


OHMEDA Integrated with one module
Converts with Med Touch T2U7xxxF

Example: T2U7OAVF = Converts pictured Ohio series 2 Slot Area Alarms. Gas set Oxygen, Medical Air, Medical Vacuum, Future Expansion (Blank) in 2nd slot. . See Med Touch Area Alarm Conversion Kits Submittal Data Sheet P/N 99-0508




Beacon (Medaes) or Hill-Rom
Total Alert and Total Alert 2
Convert with Med Touch
T2U7xxxx or T2U7xxFF or
Mega 2 & Mega 3 Convert
with Med Touch T2U9xxxx

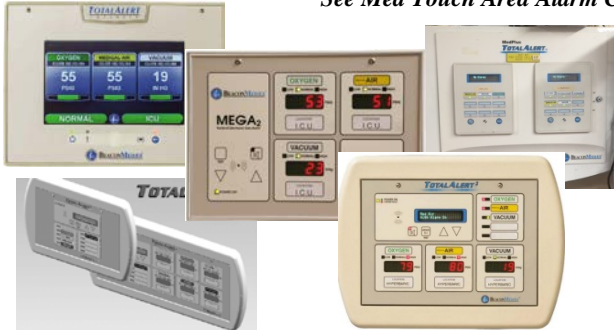

Example: T2U7OAFB = Converts pictured Hill-Rom series 2 Slot Area Alarms. Gas set Oxygen, Medical Air, Future Expansion (Blank), Future Expansion (Blank) in 2nd slot. .

Ohio 3 slot alarm
Converts with Med Touch T3UxxxxB

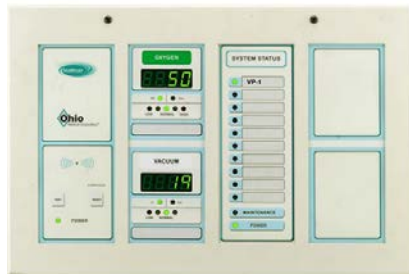

Example: T3U7OAPPB = Converts pictured Ohio series 3 Slot Area Alarms. Gas set Oxygen, Medical Air, 16 Dry Contact Signal Points w/Non-Latching Alarm Relays position at the bottom of 2nd slot, Future Expansion (Blank) in 3rd slot. . See Med Touch Combination Area & Master Alarm Conversion Kits Submittal Data Sheet P/N 99-0509




Puritan Bennett Analog alarm
Converts with Med Touch T3U7xxxxB



Example: T3U7OAVFB = Converts pictured Puritan Bennett series 3 Slot Area Alarms. Gas set Oxygen, Medical Air Medical Vacuum gas modules, Future Expansion (Blank) in 2nd slot, 3rd slot is for Future Expansion (Blank). See Med Touch Area Alarm Conversion Kits Submittal Data Sheet P/N 99-0508



Older Tri-Tech Medical alarms are easily converted with:

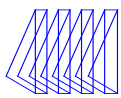

Tri-Tech "AA" Series:
1-2 gas with Med Touch T2U6xxFF
3-4 gas with Med Touch T3U6xxxxxB
5-6 gas with Med Touch T5U6xxxxxxFFBB



Example: T5U6OAFB = Converts pictured "AA" series 5 Slot Area Alarms. Gas set Oxygen, Medical Air, Medical Vacuum, Nitrogen, Nitrous Oxide, WAGD, Future Expansion (Blank), Future Expansion (Blank) position at the bottom of 3rd slot, 4th and 5th slots are for Future Expansions (Blank).

See Med Touch Area Alarm Conversion Kits Submittal Data Sheet P/N 99-0508



Tri-Tech "AU" series
1-2 gas with Med Touch T2U8xxFF
3-4 gas with Med Touch T3U8xxxxFB
5-6 gas with Med Touch T5U8xxxxxxFFBB



Example: T3U8OAVFB = Converts pictured "AU" series 3 Slot Area Alarms. Gas set Oxygen, Medical Air Medical Vacuum gas modules, Future Expansion (Blank) in 2nd slot, 3rd slot is for Future Expansion (Blank).

See Med Touch Area Alarm Conversion Kits Submittal Data Sheet P/N 99-0508



Black or White "DU" series
1-4 gas Med Touch T2U8xxxx
5-6 gas Med Touch T3U8xxxxxxFF
Up to 14 gases
Med Touch T5U8xxxxxxxxxxxxxxxxFF



Example: T3U8OAVTNWFF = Converts pictured "DU" series 3 Slot Area Alarms.

Gas set Oxygen, Medical Air, Medical Vacuum, Nitrogen in 2nd slot. Nitrous Oxide, WAGD gas modules, Future Expansion (Blank), Future Expansion (Blank) in 3rd slot.
See Med Touch Area Alarm Conversion Kits Submittal Data Sheet P/N 99-0508

All Masters maybe converted using T2U7, T3U7, or T5U7 regardless of the manufacturer. With the exception of converting a tri-Tech "AU or DU" alarm. They would be converted using T2U8, T3U8 or T5U8 conversion alarms.

See Med Touch Master Alarm Conversion Kits Submittal Data Sheet P/N 99-0507

